
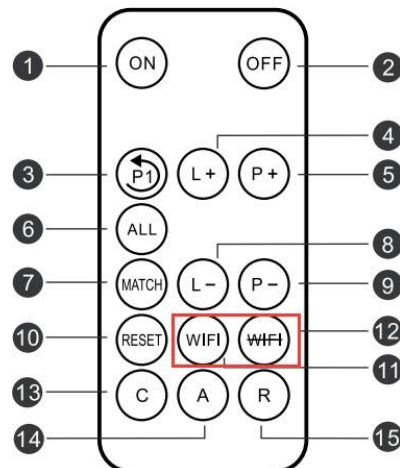


# Hidden device **WIFI** is not visible (close **WIFI**)

Scenario: For safety, to prevent passersby from connecting to the device and illegally controlling it. Need to hide the **WIFI** of the device and prevent others from connecting, how to achieve it?

A: The device supports the operation of turning off **WIFI**. When the **WIFI** is turned off, the second indicator light on the back of the device will display in white. The methods to turn off the **WIFI** of the device are as follows:

- 1) Press the remote control "**WIFI**", the device **WIFI** will close
- 2) **WIFI** In the open state, long press the "**NET**" button on the back of the device for 3S Left and right, device **WIFI** will close

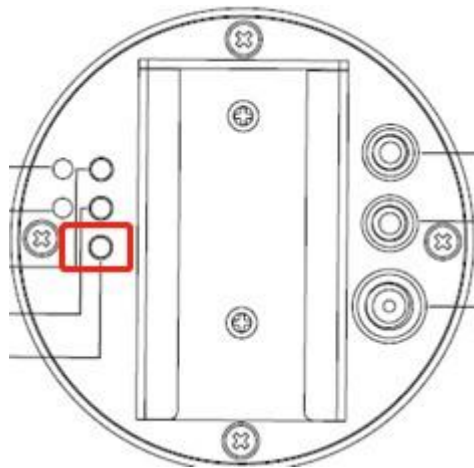

When the **WIFI** is turned off (the second indicator light on the back of the device is displayed in white), press "**WIFI**" button on the remote control or long press the "**NET**" button on the back of the device for 3S to turn on the **WIFI** of the device. **connected screen devices, turning off the host and turning on **WIFI** can work on all connected screen devices.**