

How to use the A80 remote control

In order to ensure the waterproof effect of the A80, the back interface and buttons of the A80 are sealed. A80 needs to be combined with the mobile APP to match the remote control.


step:

Method 1: Connect the device through the mobile phone APP, enter the setting interface and click "Advanced Options", click "Remote Matching", and send a remote control matching request. When the green light of the fan blade LED flashes, click the "MATCH" button of the remote control to complete the matching.



Method 2: Press the "ALL" button on the remote control, when the green light of the fan blade LED flashes, click the "MATCH" button on the remote control to complete the matching. (This method will cause all peripheral devices to match the remote control; if pressing the ALL button, the fan blade does not flash green, please check whether the program supports it; at the same time, check whether the "All matching remote control" function is enabled in the APP setting interface)

Description of remote control buttons

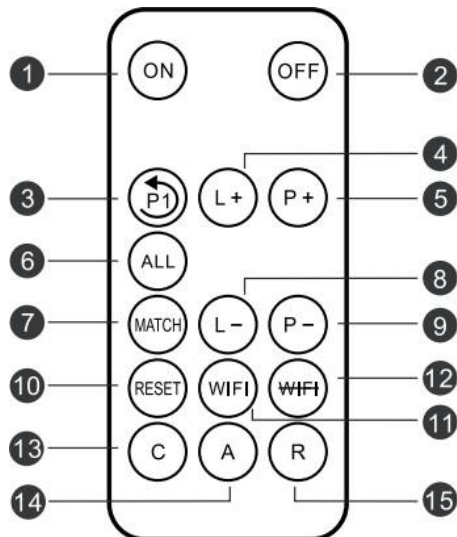

- | | |
|--|---|
| ① ON: Device rotary switch | ⑨ P-: switch to previous video |
| ② OFF: Device stop switch | ⑩ RESET: reboot the system |
| ③ P1: Back to first video | ⑪ WIFI: turn on wifi |
| ④ L+: increased brightness | ⑫ WIFI: turn off wifi |
| ⑤ P+: switch to next video | ⑬ C: Enter cloud mode |
| ⑥ ALL: All hosts enter the matching remote control state | ⑭ A: Disconnect from cloud and outed mode |
| ⑦ MATCH: match remote control | ⑮ R: enter routing mode |
| ⑧ L- : reduce brightness | |